




Reference Guide for NanoClave™ Manifold

Multi-Port Infusion System

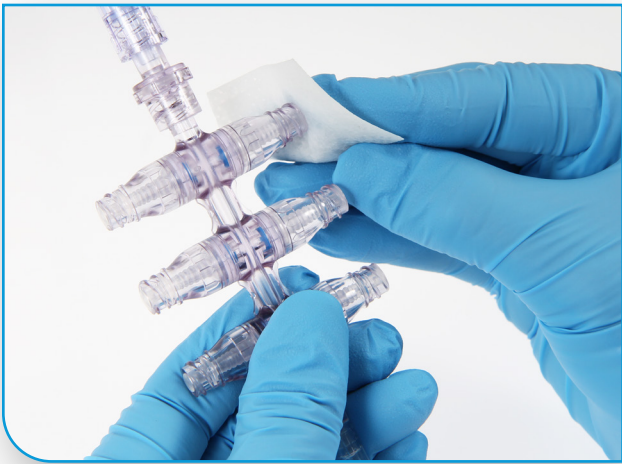

Disinfect to Protect

- › When attaching a new NanoClave manifold, prime each connector side port and the main line of the set by attaching a desired priming solution or normal saline, in accordance with facility protocol.
- › Before accessing NanoClave, always disinfect the injection site with the approved antiseptic per facility protocol.
- › Scrub the injection site in accordance with facility protocol for appropriate scrubbing and dry times.



Administer

- › Attach IV tubing or syringe to NanoClave by inserting the luer and twisting until a friction fit is achieved.
- › Do not over-tighten a luer beyond the friction fit as this may damage both the luer and NanoClave.



Flush After Each Use

- › Flush manifold NanoClave connector per facility protocol. After blood use, NanoClave can be flushed clean and does not require change-out.
- › Use routine flushing in accordance with facility protocol in order to maintain catheter patency.
- › Change NanoClave manifold in accordance with facility protocol and CDC Guidelines.



NanoClave's saline flush option is designed to help reduce the risk of Heparin Induced Thrombocytopenia (HIT).

Warning: Clave™ connectors may be incompatible with some male-luer connectors including prefilled glass syringes. To avoid damage to the Clave or syringes or male luers which may result in delays of medication administration and possible serious adverse events, users should confirm mating luers or syringes have an internal diameter range of 0.062" to 0.110". Check the internal diameter of the male-luer connector of the mating syringe prior to using it to access the Clave. Products outside of these dimensional tolerances should not be used.